

#1550

Corn Dog Maker

Instructions for Use
and
Recipe Guide

**FOR YOUR SAFETY AND CONTINUED ENJOYMENT OF THIS
PRODUCT, ALWAYS READ THE INSTRUCTION BOOK
CAREFULLY BEFORE USING**

**IMPORTANT SAFEGUARDS
READ ALL INSTRUCTIONS**

- Make sure the voltage in your outlet is the same as the voltage indicated on the appliance's rating label.
- Use only for household.
- Do not touch hot plates surfaces. Use handle.
- To protect against risk of electric shock, do not immerse the cord, plug or cooking unit in water or any other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
- Do not operate any appliance with a damaged cord or has malfunctioned or been damaged in any manner. In order to avoid the risk of an electric shock, never try to repair the Corn Dog Maker yourself. Take it to an authorized service station for inspection and repair. An incorrect reassembly could present a risk of electric shock when the Corn Dog Maker is used.
- The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or risk of injury to persons.
- Do not use outdoors or for commercial purposes.
- Do not let power cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or heated oven.
- Do not intend to operated by means of an external timer or separate remote-control system.

- Unplug the unit when finished using.
- Extreme caution must be exercised when moving an appliance.

PARTS IDENTIFICATION



1. Handle
2. Upper Housing
3. Power Light
4. Ready Light
5. Non-stick Cooking Plates
6. Bottom Housing
7. Handle Lock

BEFORE FIRST USE

- Read all instructions carefully and keep them for future reference.
- Remove all packaging
- Clean the cooking plates by wiping a sponge or cloth dampened in warm water.

DO NOT IMMERSE THE UNIT AND DO NOT RUN WATER DIRECTLY ONT THE COOKING SURFACES.

- Dry with a cloth or paper towel.
- For best results, lightly coat the cooking plates with a little cooking oil or cooking spray.

NOTICE: When your Corn Dog Maker is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.

HOW TO USE

- Close the Corn Dog Maker and plug it into the wall outlet, you will notice that the power and ready light will come on, indicating that the Corn Dog Maker has begun preheating.
- It will take approximately 2 to 3 minutes to reach baking temperature, the ready light will goes off.
- Open the lid, put the meat or other foods on the bottom cooking plate.
- Close the lid. The ready light will go on again.
- Cook for about 2 to 4 minutes, the ready light goes off again, or until golden brown, adjusting the time to suit your own individual taste.

- When the food is cooked, use the handle to open the lid. Remove the foods with the help of a plastic spatula. Never use metal tongs or a knife as these can cause damage to the non-stick coating of the cook plates.
- Once you are finished cooking, disconnect the plug from the wall outlet and leave unit open to cool.

CLEANING AND CARE

- Always unplug the Corn Dog Maker and allow it to cool before cleaning. The unit is easier to clean when slightly warm. There is no need to disassemble Corn Dog Maker for cleaning. Never immerse the Corn Dog Maker in water or place in dishwasher.
- Wipe cooking plates with a soft to remove food residue. For baked on food residue squeeze some warm water mixed with detergent over the food residue then clean with a non abrasive plastic scouring pad or place wet kitchen paper over the grill to moisten the food residue.
- Do not use anything abrasive that can scratch or damage the non-stick coating.
- Do not use metal utensils to remove your foods, they can damage the non stick surface.
- Wipe the outside of the Corn Dog Maker with a damp cloth only. Do not clean the outside with any abrasive scouring pad or steel wool, as this will damage the finish. Do not immerse in water or any other liquid.
- Do not place in the dishwasher.
- Remove and empty the drip tray after each use and wash the tray in warm, soapy water. Avoid the use of scouring pads or harsh detergents as they may damage the surface. Rinse and dry thoroughly with a clean, soft cloth and replace.

STORAGE

- Always unplug the Corn Dog Maker before storage.
- Always make sure the Corn Dog Maker is cool and dry before storing.

CORN DOG RECIPE

(can be made also with gluten free cornmeal and
gluten free biscuit or pancake mix)

1 egg, beaten
2/3 cup milk (you can use soy, almond, etc.)
1/2 cup cornmeal
1/2 cup Pancake mix
2 teaspoons sugar
1 package (16 oz) hot dogs
Wooden Sticks, if desired

INSTRUCTIONS

- Mix batter together.
- Cut hot dogs in half, across the middle.
- Optional: put sticks/skewers in the end of the hot dogs.
- Turn on corn dog maker, wait until hot or ready light comes on.
- Spray with non-stick if desired, though it is not necessary.
- Submerge hot dogs in batter until covered and place in cooker.
- Spoon a small amount of extra batter on top of the hot dog if it isn't covered enough.
- When all are in place, close the corn dog maker and let cook 3-5 minutes. Different ingredients or different batters can effect cook time. Do not open corn dog maker for the first 3 minutes.
- Check corn dogs after they cook for 3 minutes and turn them over. If no sticks were used, gently turn over corn dogs using a silicone spatula. Continue cooking for another 2 minutes or until golden brown.
- Recipe can be doubled to make full pack of hot dogs.

CucinaPro

www.cucinapro.com

Customerservice@cucinapro.com